

Types 127 and 128 Capacitance Manometer Pin-outs

Pin	Description
1	No Connection
2	Pressure Output
3	No Connection
4	No Connection
5	Power Common
6	-15 VDC
7	+15 VDC
8-11	No Connection
12	Output Return
13-14	No Connection
15	Chassis Ground.