

Vision 2000-A XD

High Sensitivity RGAs for ALD and CVD Processes



The Vision 2000-A XD Residual Gas Analyzer (RGA) improves process productivity and product quality by providing real-time trace level monitoring of various gas species, including precursors, reaction byproducts, and contaminants during ALD and CVD processes. The Vision 2000-A XD system incorporates MKS' patented V-lens™ technology, taking the proven performance of the Vision 2000-A XD system to a higher level of sensitivity and reliability, previously unachievable with conventional quadrupole mass spectrometry systems (QMS). The V-lens design provides increased sensitivity and reproducibility for the most challenging applications, such as tracking levels of various gas species or reaction byproducts during ALD and CVD deposition processes. With V-lens technology, process engineers can identify and prevent potentially costly issues faster and easier while maximizing yield.


The new Modular UniBloc™ Inlet operates at up to 200°C, preventing precursor condensation and inlet blockage, as well as improving inlet

lifetime (MTTM). The new, custom inlet design eliminates sampling gas delivery delays with minimum internal volumes and surface areas resulting in fast response to dynamic gas chemistries. A sample variety of sample transfer tubes can be attached directly to the inlet face further improving both response time and sampling fidelity from the point of interest. Additionally, the new design makes field maintenance of valves and flow elements quick, easy and cost effective. Fast scanning electronics allow a wide dynamic range of each scan to monitor process gases and trace byproducts, supporting the fast monitoring needed for ALD.

Vision 2000-A XD RGA's high sensitivity V-lens technology, improved electronics with fast and wide dynamic range scanning capabilities, and minimized internal volume and surface area for improved gas delivery speeds, make the Vision 2000-A XD the choice to support monitoring short ALD pulse cycles.

Product Features

- Modular UniBloc inlet with all metal seals and field serviceable parts
- Temperature inlet, up to 200°C (consult the factory for models up to 300°C)
- V-lens ion optics technology
- Process Eye™ Professional software for data acquisition, interpretation, recall, and intelligent alarming
- TOOLweb® RGA software for automated monitoring of semiconductor tools (available option)

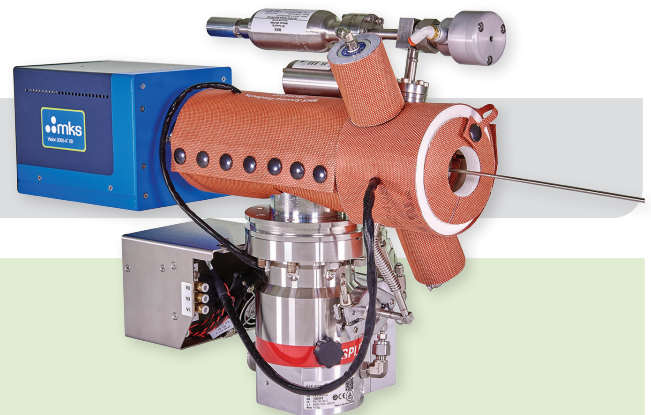

Key Benefits

- High temperature inlet enhances lifetime by preventing precursor condensation and process byproduct buildup
- Fast response UniBloc inlet, with rapid scanning electronics, provides quick monitoring of ALD process chemistries
- Detects trace amounts of ALD reaction byproducts (~15ppb) with V-lens technology providing improved process byproduct and contamination sensitivity
- Double filter options improve contamination resistance and increased high mass transmission of precursor and fragment ions
- Sampling inlet, ion source, mass filter, and reducing the sampling gas into RGA with the low detection limit of V-lens technology result in long lifetime

The Vision 2000-A XD incorporates the Microvision 2 "smart head" RGA technology with a closed ion source and close-coupled inlet. This state-of-the-art RGA technology is integrated with the Process Eye Professional control platform, a recipe based, user configurable software program. The combination of a closed ion source and automated inlet allows seamless monitoring of the complete ALD or CVD process cycle, from base vacuum to process pressures up to 760 Torr. By maximizing the ratio between ALD and CVD chamber gas signals and the gas background in the differentially pumped Vision 2000-A XD analyzer housing, the closed ion source enables approximately 15ppb-level detection for trace reaction byproducts and contaminants in the process gas. The closed ion source analyzer is manufactured from vacuum prepared stainless steel and high-density alumina ceramics and features independently replaceable twin filaments to provide built-in backup in the event of a filament failure. The standard system includes a double filter analyzer to increase the sensitivity of high mass species (for ALD/CVD precursors with high molecular weight), improving contamination resistance and enhancing long-term stability.

Each Vision 2000-A XD system incorporates a Remote Vacuum Controller (RVC) that provides fail-safe protection for both the process tool and the RGA. It allows full operation and control of RGA system components (filaments, pumps, inlet valves, bake-out, etc.) from the system PC. Available in a compact, remotely-mounted rack module the RVC and power supplies. The unit is easily mounted onto any standard 19" tool rack for mounting on a process chamber or other compatible location. Thirty-three-foot (10 m) cables are included as standard so that the probe assembly can be located in a remote position (other lengths are available).

High Temperature Modular UniBloc™ Inlet

The Vision 2000-A XD modular UniBloc is designed to operate at temperatures of up to 200°C for the whole sampling inlet with modular valves and flow elements. All external seals are metal. Many ALD and CVD precursors are liquid or solid at room temperature and may condense, leading to blockage of the gas sampling inlet if the sampling inlet and valve are not at the required temperature. A conformal heating jacket provides uniform temperature control of the whole inlet and valve, eliminating cold spots and preventing precursor condensation, minimizing deposition within the valve and maintaining mobility of sticky or polar gases through the inlet. The high temperature sampling inlet of the

Vision 2000-A XD resists blockage and enhances the lifetime of the inlet during sampling of ALD or CVD precursors. If flow element or valve maintenance is required, the new modular design makes it a quick and cost-effective end-user operation, easily performed in the field.



High Temperature UniBloc™ Inlet.

The modular UniBloc was engineered to have minimal internal volume and surface area, reducing surface reactions, and providing fast response to ALD process chemistries. Furthermore, a sample transfer tube can be connected directly onto the face of the modular UniBloc, giving a fast, coaxial flow path from the optimum point of the process equipment to the ion source. From its 1/8" internal compression ferrule connection, users can readily adapt to any choice of tube size and material. The exclusive fast response of the new modular UniBloc inlet manifold allows sampling at both background and process pressures through specific, selected orifices. When not sampling, the inlet valves close and the analyzer is automatically isolated from the process chamber. Optional purging of the inlet is available, flowing inert gas through the mass spectrometer system while not sampling (purge gas does not flow to the process chamber). Such purging is active during bakeout, reducing initial startup time and residual background recovery time.

When sampling gases from >10 Torr, two-stage pressure reduction is provided using bypass pumping. For processes with maximum pressures <10 Torr, low-flow sampling through a single orifice is common, but with performance degradation in ALD applications. With the modular UniBloc inlet, a special configuration is available to draw supplemental sample flow to the inlet via bypass pumping, reducing both sample gas transfer lag and spreading of gas composition changes. In combination with a direct sample transfer tube, this optimizes pulse monitoring.

The inlet valve is operated by integrated electronics and controlled via recipes from Process Eye Professional. The required valve selection is made automatically by a gas independent pressure sensor in the modular UniBloc inlet which also provides a readout of the process chamber total pressure in the Process Eye Professional software.

V-lens™ Technology

ALD and CVD processes typically employ inert gases such as Argon or Nitrogen for precursor carrier gas or purge gas between ALD pulsed cycles. The use of these gases can be challenging as they generate an elevated baseline in RGAs due to large amounts of chemical background noise caused by metastable decay. This results in reduced sensitivity which can be problematic for manufacturers who want to identify changes in trace gases (which are indicative of issues during the manufacturing process) quickly and easily. V-lens technology, a unique enabling solution, helps overcome this issue by providing a consistently low mass independent baseline and detection levels in the low ppb range. This is achieved with unique ion optics that utilize a patented double-focusing and deflection mechanism that significantly reduces background and enhances sensitivity. The result is a gas analyzer with limits of detection in the low ppb range without compromising any other aspect of performance.

This state-of-the-art RGA technology is integrated with Process Eye Professional control platform, a recipe based, user-configurable software program. The combination of V-lens, a closed ion source, and automated inlet allows for sensitive and reproducible monitoring of the complete ALD or CVD process cycle. By maximizing the ratio between ALD and CVD chamber gas signals and the gas background in the differentially pumped analyzer housing, the V-lens and closed ion source enables ppb-level detection for trace contaminants in the process gas.

Process Eye™ Professional Control Platform


The Vision 2000-A XD analyzer uses Process Eye Professional, a highly flexible, modular application operating under 32bit or 64bit Windows 7, Server 2016 or Windows 10. Designed with a "client/server" structure, Process Eye Professional incorporates TCP/IP protocol for full network compatibility. Creating UniBloc inlet valve process recipes is made easy by the recipe wizard function, which allows customized warnings and alarm levels to be triggered whenever the process exceeds preset levels. The Process Eye Professional recipes also specify the way in which the Vision 2000-A XD acquires, displays, and stores data. Other key parameters, such as ion source settings, can be set via the Process Eye Professional recipe. This allows the user to optimize settings for each phase of the process independently. For example, ideal settings for baseline can be set up in the baseline recipe, ideal settings for process monitoring can be set in the process recipe, etc.

Process Eye Professional enhances the Vision 2000-A XD by providing:

- Automated and intelligent operation of MKS RGAs with fully customizable controls and alarms
- Recipes for automated calibration
- Flexible scanning
 - Bar Chart, Analog and Peak Jump scanning modes which can be mixed and associated with data trend displays
- Intelligent, user defined warnings and alarms
 - Can include a suggested diagnosis of the fault condition and recommended solution
- Data displays in relevant units, such as Torr, mbar or Pa in the process chamber
- Optional ability to read data from other sensors using analog inputs and external events by digital inputs
- Data buffer for quick on-line review of recent data
- Full storage of all data for subsequent review and analysis

TOOLweb® RGA

Using the same RGA integration option for process tools, Vision 2000-A XD can be used for all ALD, and CVD process in a completely automated process environment. TOOLweb RGA maintains a constant monitoring of tool activities with all sensor data being framed by wafer logistics before alarm models are applied. Full alarm and data reporting to the FAB host and FDC are available allowing real-time monitoring of chamber conditions and flagging of any process excursions from ideal conditions.

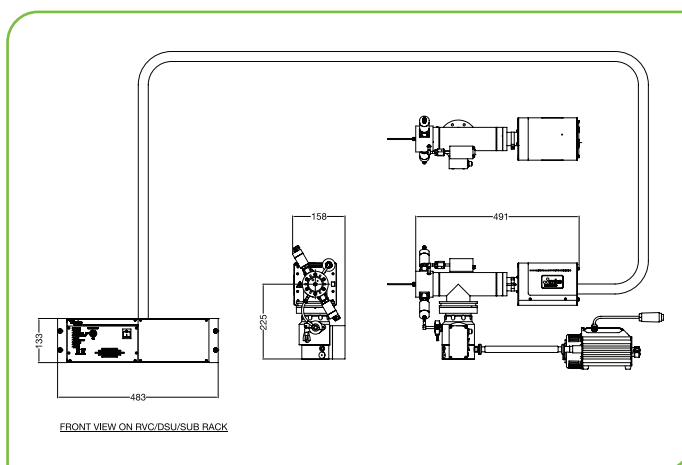

Dimensional Drawing

Analyzer	
Mass Range Options	1-100, 1-200, 1-300 amu
Ion Source	High conductance closed ion source
Filaments	Independently replaceable twin Tungsten or Thoria filaments
Mass Filter	Double filter (1-inch "RF only" pre-filter with 4-inch main filter)
Detector System	Dual (Faraday and secondary electron multiplier)
Maximum Analyzer Operating Pressure	1e-3 Torr at the ion source inlet (standard), higher pressure optional
Minimum Detectable Partial Pressure	<1e-12 Torr (for total pressures <1e-4 Torr on baseline inlet)
Minimum Detectable Concentration	<15 ppb (specified with Argon or Nitrogen for non-interfering peaks)
Mass Stability	Better than ± 0.1 amu over 8 hours
Resolution	Better than 10% valley between peaks of equal height throughout the mass range
Vacuum System Pressure Ranges	
Base Pressure Ranges	Maximum inlet pressure can be chosen in the range of 10 mTorr to 10 torr
Process Pressure Ranges	Maximum inlet pressure can be chosen in the range of 100 mTorr to 760 torr. Please consult the factory for the exact range value closest to your desired pressure. *Inlets for <10 Torr can have optional gas flow acceleration.
Mounting Flange	DN35CF (70mm/2.75" OD) Conflat® flange. Custom adapters can be provided
Vacuum Hardware	67 l/s turbomolecular pump with high conductance analyzer housing, inlet system, modular UniBloc inlet, automated vacuum control (RVC), completely interlocked and integrated
Standard Backing Vacuum System	Connected to the tool foreline pump via Surge Protect assembly with a KF16 fitting
Optional Backing Vacuum System	Independent chemically resistant, dry diaphragm pump with KF16 fitting for connecting the exhaust to a suitable scrubber system
Base Pressure	Better than 5e-9 Torr after bakeout
UniBloc Maximum Temperature	Up to 150°C or up to 200°C
Bakeout Temperature & Bakeout Jacket	Included for 180°C bakeout of analyzer chamber
Operating Temperature	70°C (controlled to $\pm 1^\circ\text{C}$)
Total Weight	33 lbs. (15 kg) to bolt on Process System
Mechanical Support	Optional stands and brackets are available
Mobile RGA Platform	Optional RGA trolley to improve versatility (footprint 18x24", 455x604mm)
Pneumatics	60-80 psig CDA
Control Unit/PC	
Control Module Weight	1.7 kg
Power	88-264 VAC, 47/63 Hz, 600 Watts
Maximum Operating Conditions	Electronics: 10-40°C, 80% RH (non-condensing)
LED Status Indication	Interlock status, filament emission, SEM, power and communications
I/O Capability	4 analog inputs and 2 outputs (plus 1 dedicated gauge input). Optional support for a large number of both analog and digital inputs and outputs, including relay control
Other Facilities	Leak check headset socket, external filament trip socket, instrument reset
Software (*recommended)	Process Eye Professional fully network compatible control platform generating under 32bit or 64bit Microsoft® Windows® 7, Server 2016 or Windows 10*
Communications	Ethernet CAT-5e
Minimum PC Specification Required	Intel® i5 3.1Ghz or AMD Ryzen 5 4.4Ghz, 8GB RAM, 512 GB hard drive, dependent upon total number of sensors on the computer and the operating system in use. Multi-sensor installation may require higher specifications.
Simultaneous Multi-Sensor	Process Eye Professional client/server configuration offers flexible multi-sensor operation.
Compliance	CE, UKCA
RGA Controller to Vacuum System Cables	
Length	33' (10 m) standard RGA and 10' (3m) with mobile RGA platform. Other lengths available dependent upon process system and customer requirements
Total Shipping Weight	132 lbs (60 Kg) may vary depending upon backing pump and instrument rack requirements

Please contact your local MKS office for product configuration, price and availability information.



www.MKSINST.com

Vision 2000-A XD_01/22

©2022 MKS Instruments, Inc.

Specifications are subject to change without notice.

MKS products provided subject to the US Export Regulations. Export, re-export, diversion or transfer contrary to US law (and local country law) is prohibited. mksinst™, Process Eye™, UniBloc™, and V-lens™ are trademarks and TOOLweb® is a registered trademark of MKS Instruments, Inc. All other trademarks cited herein are the property of their respective owners.